

Finishing Walls (Interior)

SmartBlock™

To ease finishing, place large lines before the pour.



Install electric and plumbing before securing any heavy support framing to concrete.



After the pour, make paths with a pen and route out areas for electrical and plumbing installation.



Install boxes, romex or conduit into slot.



Use spray foam to spot fill 12" o.c. This helps hold wire in place and allows air circulation.




If channel depth is less than 1 1/2", wires must be protected from possible puncture.



Just like with the electrical, fill plumbing chase with minimal expanding foam.



If required, and no connectors are available, use 20ga. galvanized SmartTach to secure screws.

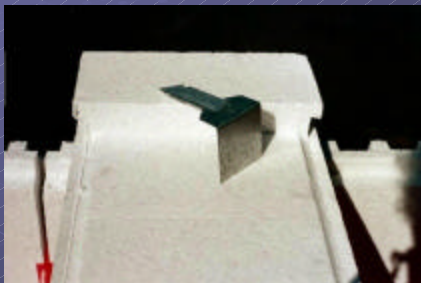

Minimum usage of SmartTach is one per lineal foot about 2" below ceiling line.



Hang drywall vertically (easiest), or horizontally.



Interior framing must be secured to the concrete.



Finished interiors look and feel great.

